Specifications

Model	BSV−24□□□−□
-------	-------------

Table of Contents


1.	Model N	Number Configuration ······	<u>:</u>
		al Specifications ·····	
		mance Specifications ······	
	2-3Signal	Input Specifications ·····	•6
2.	Wiring	Diagram ·····	.7
		s ······	
		ne Adjustment ·····	
	4-2Operat	ting Mode ·····	۶.
	4-2-1	Mode A: Bit Input/ Normal Playback ·····	۶.
	4-2-2	Mode B: Bit Input/ Input Priority Playback ······	. <u>c</u>
	4-2-3	Mode C: Bit Input/ Hold Playback ·····	. <u>c</u>
	4-2-4	Mode D: Bit Input/ Memory Playback · · · · · · · · · · · · · · · · · · ·	ı C
	4-2-5	Mode E: Binary Input/ Normal Playback ·····	
	4-2-6	Mode F: Binary Input/ Input Priority Playback · · · · · · · · · · · · · · · · · · ·	
	4-2-7	Mode G: Binary Input/ Hold Playback · · · · · · · · · · · · · · · · · · ·	ι1
	4-2-8	Mode H: Binary Input/ Memory Playback Mode · · · · · · · · · · · · · · · · · · ·	ι2
	4-3Binary	Input Table ·····	ι2
		Reduction Function · · · · · · · · · · · · · · · · · · ·	
	4-5Chang	ing the Voice Message Data ······	
	4-5-1	When using PATLITE's Playlist Editor 2 ·····	.3
	4-5-2	When not using PATLITE's Playlist Editor 2 ·····	.3
	4-6Chang	ing the Operation Mode Data · · · · · · 1	4
	4-7 Data '	Transfer ······	ι 5
5 (Outor Dim	anejone	C

[About Copyrights]

Work that was recorded or copied from music CDs or other media used in public places may infringe upon copyrights and law enforcement may be imposed. When using a work that was recorded or copied from music CDs or other media, be sure to obtain permission from the author.

Moreover, the copyright of the sound and music data which PATLITE Corporation distributes or sells belongs to our company.In addition, copyrights of audio/music data distributed or sold by PATLITE Corporation belongs to PATLITE. It is strictly prohibited to copy/reprint whole or partial contents of audio/music data belonging to PATLITE Corporation, or to transfer/sell such material on computer networks etc. without the permission of the rightful holder.

1. Model Number Configuration

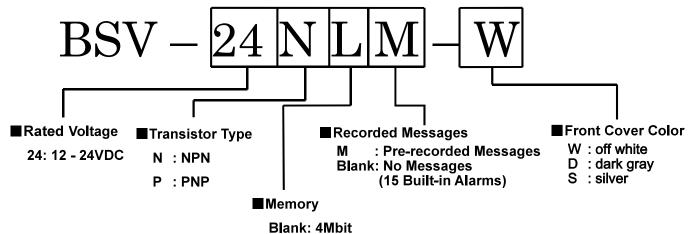

L: 32Mbit

2. Specifications

2-1 General Specifications

Item	Specif	ication					
Rated Voltage	12 to 24V DC						
VoltageRange	10.8 to 26.4V DC						
Rated Power Consumption	3.5W (1*)						
Operating	-10°C t	to 50°C					
TemperatureRange	2000	to 60°C					
StorageTemperatureRange Relative Humidity		No condensation)					
Installation Method	Side View Panel Mount Direction: Upright, Sideways, Inverted Indoor and Outdoor (Upright Only)	Speaker Direction Wall Mount Direction: Upright, Sideways, Inverted Indoor Use Only (Not for Outdoor Use) Verted Sideways					
Protection Rating	Panel Mount: IP54 (For Upright Installation Wall Mount: IP20(Self-Declaration based of	n Only, Self-Declaration based on IEC 60529)					
Insulation Resistance	•	een the terminals and the chassis					
Withstand Voltage	500VAC applied for 1min between terminals and chassis without breaking insulation						
Vibration Resistance	70.0m/s ² (In the X, Y and Z directions for 2 hrs. each at 30Hz)						
Inrush Current	Max.7A						
Mass (Tolerance ±10%)	100g						
Compliances	EMC Directive:EN 61000-6-4, EN 61000-6-2 RoHS Directive:EN 50581 UL Recognized Component (UL464 File No.S24210) FCC Part15 SubpartB Class A						

^(1*) Tested with 24VDC supply at maximum volume and with channels 1 through 4 entered and data playback with a 1kHz Sine Wave at -6dB.

2-2Performance Specifications

Item	Specification									
	Ма	Max. 87 dB or more (for Panel Mount) Max. 85 dB or more (for Wall Mount)								ount)
Sound Pressure Level	Measurement Conditions: The product is attached to the center of a 300x300mm board with a 1kHz sine wave played back at -6dB, and the decibel meter is set 1 meter away from the front of the product. *The sound pressure level will vary upon the surrounding environment and message contents.									
Volume Control	Sound	d Reduction				ent: Minimum 3 (CH4 is des			d reduc	tion input)
Number of Playback Messages	* The	brackets in	dicate c			B) / Binary Inp le when the s			ction is	activated.
		The fol	lowing	alarm dat	ta is Ioa	ded when no	set me	ssages are c	rdered	
Initial Registered	No. 1	Chime	No. 2	Веер	No. 3	Stutter	No. 4	Bell	No. 5	Yelp
Alarm Data	No. 6	Rapid Hi Lo	No. 7	Melody Chime	No. 8	Synthesized Piano	No. 9	Synthesized Bell	No.10	Stutter + Bell
	No.11	Synthesized Melody	No.12	Call Sign	No.13	Inverted Reveille	No.14	Galactic Motor	No.15	Two Tone
Audio File Format				MP	EG1-Au	dio Layer III	(MP3)			
Bit Rate				32kb	it/s, 64k	bit/s (Standa	rd Rate	e)		
Audio Startup Time		Ab	out 300	ms after	a signa	l or power su	pply in	put is activat	ed	
Unit Memory Size						*1				
Compatible Memory Card	SD Card Recommended Part : SDV-2GP (Sold Separate)									
SD Card Format	FAT16									
Applicable Software	Patlite Playlist Editor									
Mode Change		Selectable for a file name with an empty text file.								

*1


Item	Specification				
item	BSV-24□	BSV-24□L			
Playback Time	Total of 63 seconds (at standard bit rate)	Total of 520 seconds (at standard bit rate)			
Internal Memory	508Kb(Total MP3 data)	4090Kb (Total MP3 data)			

2-3Signal Input Specifications


H	Specific	cation			
Item	BSV-24N	BSV-24P			
Input Method	Pulse Input (Pulse Width: 100msec or me	ore, not including the hold input mode)			
Channel Priority	CH4 > CH3 > CH2 > CH1 (For bit input mode only)			
Signal Input Voltage	N/A	DC 12 to 24V			
Open Circuit Voltage	Same as Input Voltage	N/A			
Input Current	5mA±1mA (power supply 10mA±1mA (power supply				
	Non-voltage Contact Input	Voltage Contact Input			
Relay Input (Circuit Diagram)	Internal Voltage Power (-)	CH Power (+)			
	NPN Transistor Circuit	PNP Transistor Circuit			
Transistor Input (Circuit Diagram)	CH Internal Voltage Power (-)	PNP Power (+)			

2. Wiring Diagram

BSV-24N

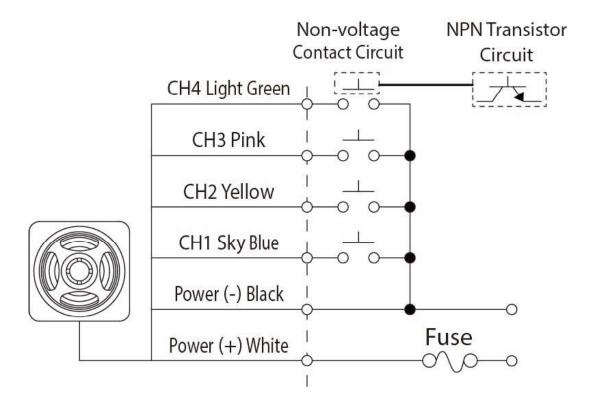

■BSV-24P

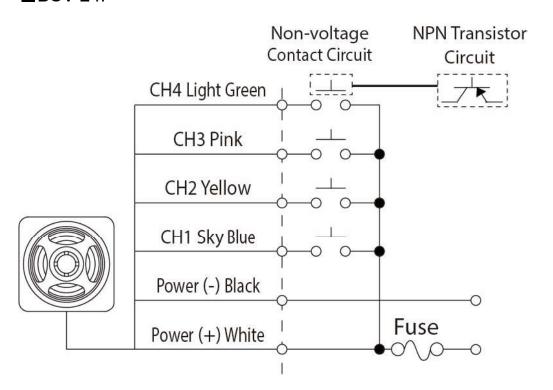

4. Functions

4-1 Volume Adjustment

The volume control is located inside the front cover and is adjustable.

4-2Operating Mode

There are eight operation modes selectable from "A" through "H" which, in combination with commands, can select the various functions.

	Operating Mode						
Mode	Function	Mode	Function				
Α	Bit Input / Normal Playback	Е	Binary Input / Normal Playback				
В	Bit Input / Input Priority Playback	F	Binary Input / Input Priority Playback				
С	Bit Input / Hold Playback	G	Binary Input / Hold Playback				
D	Bit Input / Memory Playback	Н	Binary Input / Memory Playback				


Factory default settings

Model	Mp3 Data Registration	Operating Mode	
BSV-24□-□	No specified messages	Binary Input / Normal Playback	
B3V-24 -	(Initial Registered Alarm Data)		
DSV 24-M -	Four or less message specified	Binary Input / Input Priority Playback	
BSV-24□M-□	Five or more message specified	Binary Input / Hold Playback	

Although there are 15 sounds registered, when using all 15. It is necessary to change The operational mode into the Binary input mode.


4-2-1 Mode A: Bit Input/ Normal Playback

- CH1 to CH4 are used for a maximum playback of 4 channels.
- Playback is through a pulse input. Playback is repeated when an input is held.
- Any input is invalid during an MP3 message playback

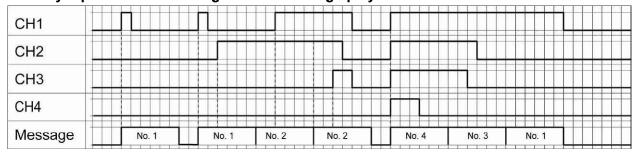

4-2-2 Mode B: Bit Input/ Input Priority Playback


- CH1 to CH4 are used for a maximum playback of 4 channels.
- During an MP3 message playback, the message will stop when a different channel input is entered and the message will continue after the previous channel's message has ended.
- Even if an input is held, playback is only played once.

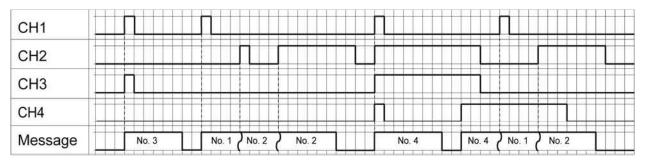

♦ The wavy line in the pulse train indicates a message stopped during playback and the message in conjunction with the input channel is played.

4-2-3 Mode C: Bit Input/ Hold Playback


- CH1 to CH4 are used for a maximum playback of 4 channels.
- The message will only play back while the input is held on, and the message will stop when the input is removed.
- While the input is held on, the message playback will be repeated.

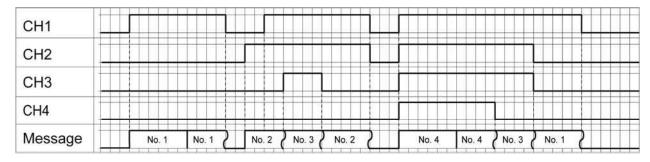

♦ The wavy line in the pulse train indicates a message stopped during playback and the message in conjunction with the input channel is played.


4-2-4 Mode D: Bit Input/ Memory Playback

- CH1 to CH4 are used for a maximum playback of 4 channels.
- When the channel is entered once, the memory of the corresponding channel will playback when the current message is completed. The input channel is invalid after entering it once into memory.
- When two or more inputs are simultaneously entered, playback is based on the channel with the higher priority.
- Even if an input is held, playback is only played once.

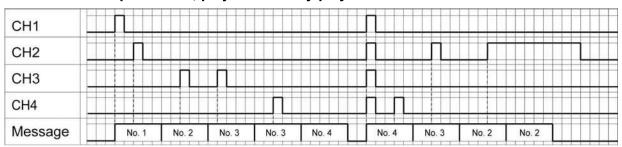


4-2-5 Mode E: Binary Input/ Normal Playback

- CH1 to CH4 are used for a maximum playback of 15 channels. (Refer to 4-3. "Binary Input Table")
- Playback is through a pulse input. Playback is repeated when an input is held.
- Any input is invalid during an MP3 message playback.

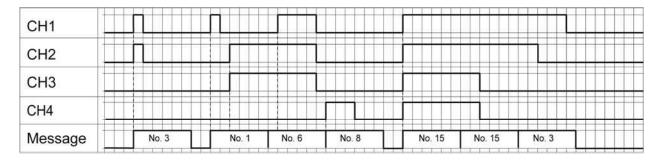


- 4-2-6 Mode F: Binary Input/ Input Priority Playback
- CH1 to CH4 are used for a maximum playback of 15 channels. (Refer to 4-3. "Binary Input Table")
- During an MP3 message playback, the message will stop when a different channel input is entered and the message will continue after the previous channel's message has ended.
- Even if an input is held, playback is only played once.

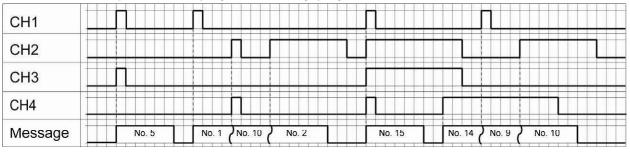

♦ The wavy line in the pulse train indicates a message stopped during playback and the message in conjunction with the input channel is played.


4-2-7 Mode G: Binary Input/ Hold Playback

- CH1 to CH4 are used for a maximum playback of 15 channels. (Refer to 4-3. "Binary Input Table")
- The message will only play back while the input is held on, and the message will stop when the input is removed.
- While the input is held on, the message playback will be repeated.

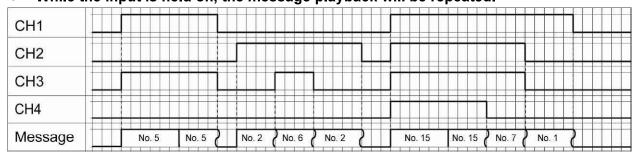

♦ The wavy line in the pulse train indicates a message stopped during playback and the message in conjunction with the input channel is played. 4-2-8 Mode H: Binary Input/ Memory Playback Mode

- CH1 to CH4 are used for a maximum playback of 15 channels.
- When the channel is entered once, the memory of the corresponding channel will playback when the current message is completed. The input channel is invalid after entering it once into memory.
- Even if an input is held, playback is only played once.

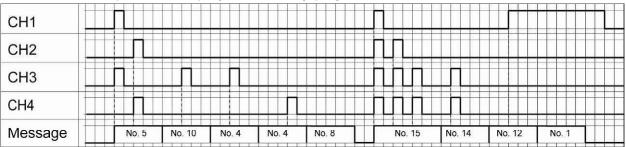

4-3Binary Input Table

Playback Message	CH1	CH2	СНЗ	CH4	Playback Message	CH1	CH2	СНЗ	CH4
No. 1	•				No. 9	•			•
No. 2		•			No. 10		•		•
No. 3	•	•			No. 11	•	•		•
No. 4			•		No. 12			•	•
No. 5	•		•		No. 13	•		•	•
No. 6		•	•		No. 14		•	•	•
No. 7	•	•	•		No. 15	•	•	•	•
No. 8				•		•	•	•	•

The "•" refers to the channel input.

4-4Sound Reduction Function

When the sound reduction function is activated, if CH4 is entered while an MP3 message is in playback, the sound level of the message being played back can be reduced.

The sound pressure for the sound reduction can be preset. (Refer to "4-6. Operation Mode Data Setup" for details.)

4-5Changing the Voice Message Data


SD card (SDV-2GP sold separately) can be used for rewriting messages.

➢ It is recommended to use the SDV-2GP SD card. There is no guarantee in operation when using other SD cards.

4-5-1 When using PATLITE's Playlist Editor 2

Using PATLITE's Playlist Editor 2, the combination of MP3 files can be freely edited. For details, please refer to the help menu in PATLITE's Playlist Editor 2.

- > PATLITE's Playlist Editor 2 is free with the purchase of a PATLITE MP3 product.
 - 1. Please save the created data onto an SD Card data for PATLITE's Playlist Editor
 - 2. For creating, saving and other functions related to PATLITE's Playlist Editor
 - 2, please refer to the help menu in the respective software.

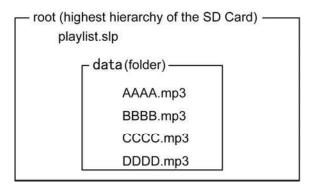

4-5-2 When not using PATLITE's Playlist Editor 2

A voice message can be changed by just changing the MP3 file name, without even using PATLITE's Playlist Editor 2.

1. The MP3 file is designated as entering the playback message number (three significant digits) for the file name.



Example:

Magazana Na	File Name	Operation Mode		
Message No.	riie Name	Bit Input	Binary Input	
2	002.mp3	CH2	CH2	
6	006.mp3	Playback Impossible	CH2, CH3	

2. Please save the created file on an SD card.

root (highest hierarchy of the SD Card)001.mp3002.mp3003.mp3011.mp3

4-6Changing the Operation Mode Data

SD card (SDV-2GP sold separately) can be used for saving changes to different operation modes.

- ➢ It is recommended to use the SDV-2GP SD card. There is no guarantee in operation when using another SD card.
 - 1. Refer to the following table to create the operational mode text file.
 - Read the file name to change the mode. The data inside the text file is not read.

	Operation Mode	File Name	Operation Mode		File Name
A	Bit Input/ Normal Playback	mode-a**.txt	Е	Binary Input/ Normal Playback	mode-e**.txt
В	Bit Input/ Input Priority Playback	mode-b**.txt	F	Binary Input/ Input Priority Playback	mode-f**.txt
С	Bit Input/ Hold Playback	mode-c**.txt	G	Binary Input/ Hold Playback	mode-g**.txt
D	Bit Input/ Memory Playback	mode-d**.txt	н	Binary Input/ Memory Playback	mode-h**.txt

• Refer to the following for the "**".

In order to activate the sound reduction function (function which drops the sound pressure of the MP3 data to be played back), enter two significant digits in the range of 01 to 50 where the "**" indicates the value for sound reduction.

The function becomes invalid when "00" or no integer is entered.

• An empty space (Null) will become an error.

Sound Reduction Level	Two significant digits to enter
No Reduction	Empty space or "00"
-7 db Reduction	07
-20dB Reduction	20

2. Save the created file on an SD card.

root (highest hierarchy of the SD Card) ———
mode-d.txt

 An error occurs when a file of two or more operational modes is saved on an SD card.

4-7 Data Transfer

The data saved on SD card by "4-5. Changing the Voice Message Data", and "4-6. Changing the Operation Mode Data" can be transmitted to a product.

- When the data of both "4-5. Changing the Voice Message Data" and "4-6.
 Changing the Operational Mode Data" is saved on an SD card; data transfer can be performed simultaneously.
- When saving data onto the SD Card using both the "4-5-1. When using PATLITE's Playlist Editor 2" and the "4-5-2. When not using PATLITE's Playlist Editor2", the data from the "4-5-1. When using PATLITE's Playlist Editor2" is given priority.
 - 1. Please check that the products power source is turned on.
 - 2. Please insert the SD card with the saved data into the SD card slot.
 - 3. The sound of a high-low beep will indicate that the data transfer is started.
 - > During the upload of the data from the SD card, any signal inputs will be ignored.
 - When the SD card is inserted during a voice message playback, the data transfer will start after the end of the message playback.
 - 4. When the sound of a short beep is heard to indicate that the data transfer has successfully been completed, please extract the SD card. Uploading should be completed within 60 seconds (In the case of BSV-24□L, within 360 seconds). When a short intermittent beep or long intermittent beep is heard, or if nothing occurs at all, the data transfer was not successfully completed. As a caution, please be sure the volume is adjusted to a nominal level, or the indicating beep will not be heard.
 - 5. After data has been uploaded, verify the message contents and operation of the product is programmed as expected.

^{*} All MP3 registered messages for the BSV-24□□M-□ will be erased if written over.

5.Outer Dimensions

